


# TEKSKIL AUXILIARY DISPLAY INSTALLATION


Your Tekskil prompter system is the most advanced class of teleprompter made. It features an integrated suspension framework to provide maximum stability for the increased mass and geometry of beamsplitters used with wide angle lenses.

All components are built to rigorous specifications – expect a smooth installation and years of trouble free operation from your Tekskil equipment.

If you have questions or suggestions – call us toll-free at 877-Tekskil (835-7545)

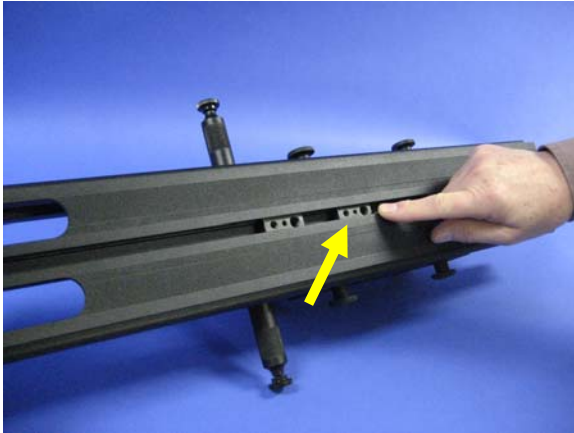

Attach Balance Rail to the Tripod or Pan / Tilt Cradle with the sliding T-nuts

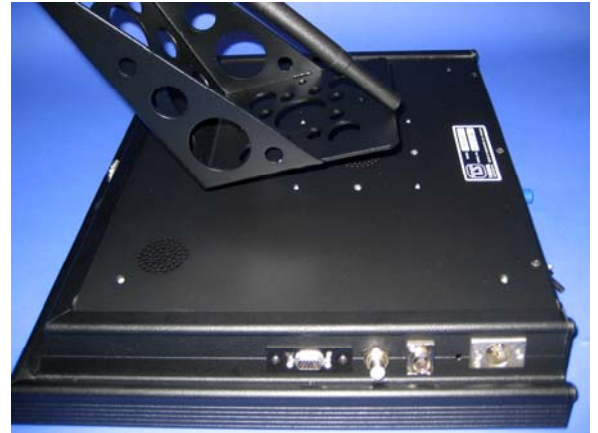

Attach the Auxiliary Bracket to the underside of the Prompter Display with the 4 thumbsnails



Dock Prompter Display studs (2) into the Rail plate keyholes and lock in place with the blue barrel nut



Slide upper end of Aux Display Support arm into the slot in the Rail face plate and secure with thumbwheel



Dock the Auxiliary Display to the support bracket by inserting the 4 knurled thumbsnails into the keyholes



Tighten the thumbsnails (blue barrel nuts) to secure the Auxiliary Display to the support bracket